

KHADAS




Tone2

Hi-Fi Mini Desktop DAC

Quickstart | 入门指南

Interface Diagram

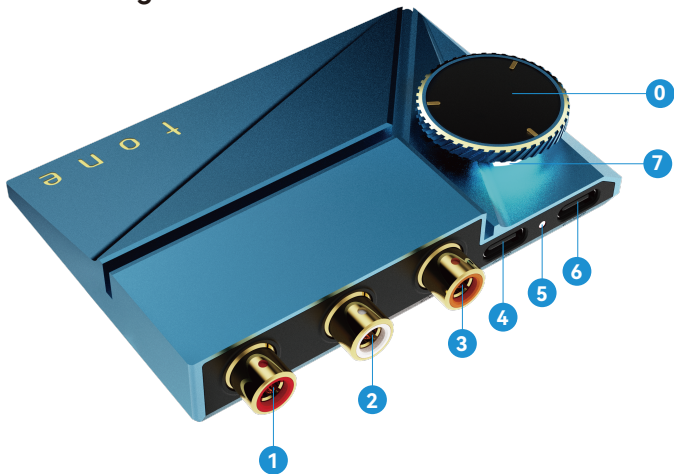

1 Balanced RCA-R

2 Balanced RCA-L

3 S/PDIF (Coaxial)

4 USB-C (I2S)

5 Power LED


6 USB-C (USB)

7 RGB LED Light


0 Volume Knob

Driver Installation

- 1 Install the Khasdas ASIO USB driver**
Download the latest driver from dl.khasdas.com/products/tone2/driver
- 2 Restart your Windows PC**
The Khasdas ASIO USB driver will activate after your PC restarts.

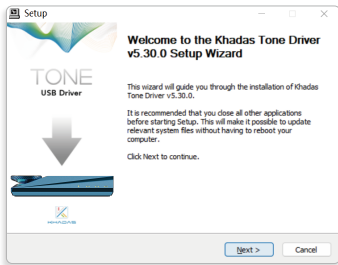

1 Step 1

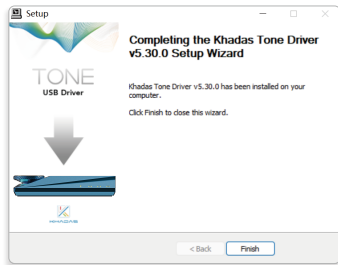


2 Step 2


* Windows' default USB audio driver has high latency, low sampling rates, and does not support ASIO. For a better user experience, please install the Khasdas ASIO USB driver.

Firmware Upgrade


- 1 Open the Khadas DFU Upgrade Tool**
Download the latest tool from dl.khadas.com/products/tone2/dfu_tool
- 2 Download the latest Tone2 firmware**
Download the latest firmware from dl.khadas.com/products/tone2/firmware
- 3 Flash new firmware to Tone2**
Connect your Tone2 via a USB-C cable to your PC, and use the DFU tool to burn the new firmware.
- 4 Power off and restart your Tone2**
After the firmware update is completed, Tone2 needs to be powered off and restarted to activate the new firmware.

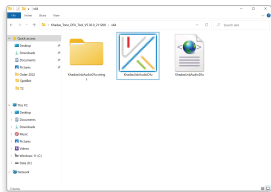

1 Step 1

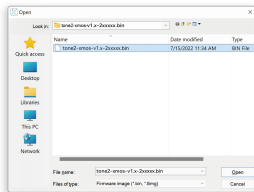


2 Step 2

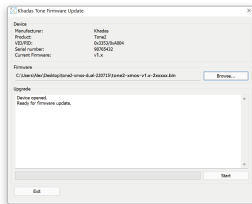







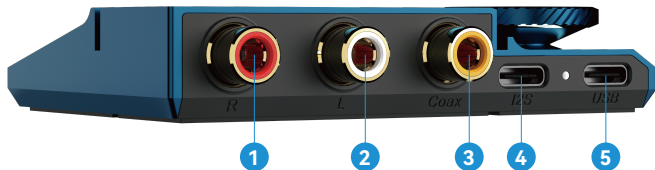





3 Step 3

* For more details, visit docs.khadas.com/tone2

Input / Output Sources



- 1**    Pre-amp (analog out) -> Amp -> Hi-Fi speaker
- 2**    Pre-amp (analog out) -> Amp -> Hi-Fi speaker
- 3**  CD player (S/PDIF coax-in)
- 4**   'Khadash BT Magic' Bluetooth audio receiver module / USB-C 5V linear power supply (power-in)
- 5**    Computer / Smartphone/ SBC (data-in and power-in)

* The 'Khadash BT Magic' Bluetooth audio receiver module needs to be purchased separately.

RCA Usage Modes



● Khasdas balanced RCA to XLR-3 converter



● Standard RCA cable

RCA
port

Standard
RCA cable

Balanced
RCA cable

1

Balanced
RCA-R

Unbalanced
signal-R

Balanced
signal-R

2

Balanced
RCA-L

Unbalanced
signal-L

Balanced
signal-L

3

S/PDIF
coaxial input

Input S/PDIF
signal R+L

1

2

3

* Attach RCA cables first, before powering on Tone2.

Power Priority




- 1 USB-C (I2S)**
Linear power supply
- 2 USB-C (USB)**
Smartphone/PC/SBC

* The USB-C (I2S) interface is not standard.
Only specific cables (sold separately) can be used for linear power supplies connected to the USB (I2S) port.

Volume Knob

- 1 Push
- 2 Rotate

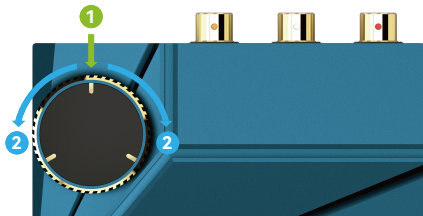

Action	
Mode	Function
General	Play / Stop
	Lock / Unlock
	Off
	On
	Erase BT record
Volume	Increase
	Decrease
Track	Next
	Previous
Input	Next
	Previous
Filter	Next
	Previous

[1] Push			
Single	Double	Triple	Long
*			
		***	*****
*			

	**		
	Mode switch		
	**		
	Mode switch		
	**		
	Mode switch		
	**		
	Mode switch		

[2] Rotate	
Clock	Anti-C
↻	↻
↻	↻
↻	↻
↻	↻

* With the external Bluetooth Module plugged-in and Tone2 powered off (USB cable with 5V power still plugged-in), long-press the volume knob for 5s to clear the Bluetooth pairing record.

LED Lights



Coax

I2S

USB



Power LED




White
USB-C (I2S) power supply



Light red
USB-C (USB) power supply

RGB ring light

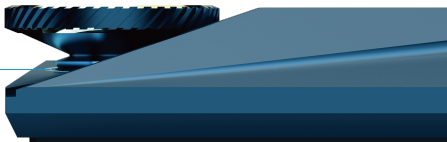

* For a more detailed explanation of the RGB ring light, turn to the next page.

RGB Ring Light Interpretation

 **Volume**
turquoise



Volume
(mute)



1-20%



21-40%



41-60%



61-80%



81-100%



HID volume adjusting
(Flashes 3 times)


 **Track**
red



Track

* HID volume adjusting refers to the 'system volume' of the playback device, e.g. PC, Smartphone, Tablet.

RGB Ring Light Interpretation

 **Input selection**
yellow, red



USB



S/PDIF




I2S



GPIO (I2S)



AUTO

 **Filter selection**
blue, red



Linear fast



Linear slow



Mini fast



Mini slow



Apodizing



Hybrid fast



Brick wall

- * GPIO (I2S) input refers to input I2S signal via GPIO interface, it's only supported in the Tone2 Maker Kit.
- * In 'S/PDIF' input mode, playing, pausing, skipping tracks and adjusting HID volume are not supported.

RGB Ring Light Interpretation

 **DSD format**
white



64



128



256



512

 **PCM format**
yellow



44.1 / 48K



88.2 / 96K



176.4 / 192K



352.8 / 384K



705.6 / 768K

* The audio format is only indicated by the RGB ring light when Tone2 is in 'USB' input mode.

RGB Ring Light Interpretation

○ Encoder locked
white



Locked
(Flashes 3 times)

● Power off
grey



Power off

FAQ

Why does Windows require the Khadas USB driver?

The Khadas USB driver provides ASIO support and removes the latency and sample rate conversion issue experienced with the default Windows USB driver for DACs.

What is Balanced RCA?

A new balanced audio connector standard, designed by Khadas for small form-factor desktop DACs. It is backwards compatible with standard RCA plugs and cables, more details visit <https://khadas.com/balanced-rca>

How do I use my existing XLR-3 equipment with Balanced-RCA?

Purchase the Khadas Balanced-RCA to XLR-3 adapter; it is a male Balanced-RCA plug connected to a male XLR-3 plug.

How do I use 'S/PDIF' input?

Attach a standard RCA cable to the orange-coloured RCA jack, and set the input mode to 'S/PDIF'. Alternatively, set the input mode to 'AUTO' and stop music playback from other sources.

How do I connect my smartphone to Tone2 via Bluetooth?

Attach a Khadas bluetooth module to the USB-C (I2S) port, and set input mode to 'I2S'.

Can the USB-C input be used with the USB-C output of Android phone?

Yes, Tone2 can be powered by most Android smartphones via USB-C.

What are the input priorities of the 'Auto' input mode?

When connecting both USB-C (USB) and S/PDIF interface in 'Auto' input mode, 'USB' input has the highest priority. When music playback over USB is stopped (you do not need to remove the USB cable), input will switch to the 'S/PDIF'.

Can I connect Tone2 to my iPhone or iPad?

Apple's iPhone does not support the Tone2. You can still connect Tone2 to your iPad using a USB-C to C cable, but the Tone2 device information will not appear on your iPad.

Does the Tone2 support native DSD decoding?

Yes, DSD512 native decoding can be enabled by installing the Khadas USB driver.

What is the voltage level of the Balanced RCA connection?

4.0Vrms for balanced RCA mode, and 2.0Vrms for standard RCA mode (single-ended).

Can I use the Tone2 to receive a signal from the TV via coaxial and send it to the amplifier via RCA?

Yes. Set the input mode as 'S/PDIF' or 'Auto', Tone2 will output to the RCA.

Can I supply power to the USB (I2S) interface using my computer, PC or laptop?

No. Please instead connect a linear power supply or battery bank to the USB (I2S) interface.

How do I adjust the HID (system) volume using the volume knob?

When Tone2 is not at or above maximum volume, turning the volume knob clockwise will increase the device's hardware volume. Once Tone2 is at maximum volume, continuing to turn the knob clockwise will cause the RGB indicator to flash turquoise 3 times. Continuing to turn the knob clockwise after this point will instead increase the HID (system) volume of your PC.

Why can't I adjust the HID volume whilst playing DSD formatted audio?

Tone2 does not support HID volume adjustment whilst playing DSD formatted audio.

Troubleshooting Guide

The Volume Knob is unresponsive and flashing full-white when I turn it.

It has been locked, triple-press it to unlock.

My Android phone can't detect Tone2, the power LED remains off, and USB-C is plugged-in correctly.

Go to 'Settings' and enable the 'USB-OTG' feature, most phones have this off by default.

My Tone2 is connected to my PC and I'm playing a song but there's no sound!

Check your computer's sound-output device, switch from 'Speakers' to the 'Tone2'. Secondly, check that your Tone2's input mode is set to 'USB' or 'Auto'.

Help! I've connected my PC to the Tone2 and the lights are on, but my computer cannot detect it!

Ensure that you've plugged your USB-C cable into the USB-C port labelled 'USB'.

I cannot hear any sound from Tone2 when playing music through the S/PDIF input.

Check to ensure that your music is not DSD formatted. The 'S/PDIF' input does not support playback of DSD music.

HID volume control does not work when playing non-DSD formatted audio and the input source is set to USB input.

Please check if there is more than one audio player running simultaneously on your playback device. In such cases, the HID volume control command will only be sent to one of the audio players. Close additional audio players, only open one audio player when using your Tone2.

Specifications | 规格参数

Balanced RCA Line-Out Performance

THD+N: 0.000126% (-118dB)

DNR: 121dB

Crosstalk, 200K Ω : > 120dB

Noise level: 3.5uVrms

Output, 200K Ω : 4.0Vrms

Single End RCA Line-out Performance

THD+N: 0.000158% (-116dB)

DNR: 118dB

Crosstalk, 200k Ω : >118dB

Noise Level: 2.3uVrms

Output, 100K Ω : 2Vrms

平衡RCA输出性能

总谐波失真加噪音: 0.000126% (-118dB)

动态范围: 121dB

串扰 (200K Ω) : > 120dB

噪声: 3.5uVrms

输出电压 (200K Ω) : 4.0Vrms

单端RCA输出性能

总谐波失真加噪音: 0.000158% (-116dB)

动态范围: 118dB

串扰 (200K Ω) : >118dB

噪声: <2.3uVrms

输出电压 (100K Ω) : 2Vrms

What's In The Box | 包装清单



Tone2 * 1pcs



USB-C Cable (Type-C to C) * 1pcs
USB-C 充电线 (Type-C to C) * 1pcs



Instruction Manual * 1pcs
产品说明书 * 1pcs



Warranty Card * 1pcs
保修卡 * 1pcs

Manufacturer: Khadas Technology Co., Ltd.

Tel: +86 755 2307 6626 **E-mail:** support@khadas.com

Address: Room 2709, Floor 27, Qiancheng Center, Haicheng Road,
Xixiang Street, Bao'an District, Shenzhen

生产商: 哈碁科技（深圳）有限公司

电话: +86 755 2307 6626 **邮箱:** support@khadas.com

地址: 深圳市宝安区西乡街道海城路5号前城商业中心2709

www.khadas.com