

Mind Pro Local BIOS Update Guide

Info

This guide covers the local BIOS update process for Mind Pro. The update takes about 5 minutes. Keep the device connected to stable power and do not shut it down during the update.


Before You Start

- Download the correct Mind Pro BIOS package in advance.
- Copy the BIOS package to the desktop for easier access.
- Extract the package completely to a local folder on the desktop.

Update Steps


Step 1: Copy and Extract the BIOS Package

Copy the downloaded MindPro BIOS package to the desktop, then extract it to a local folder on the desktop.

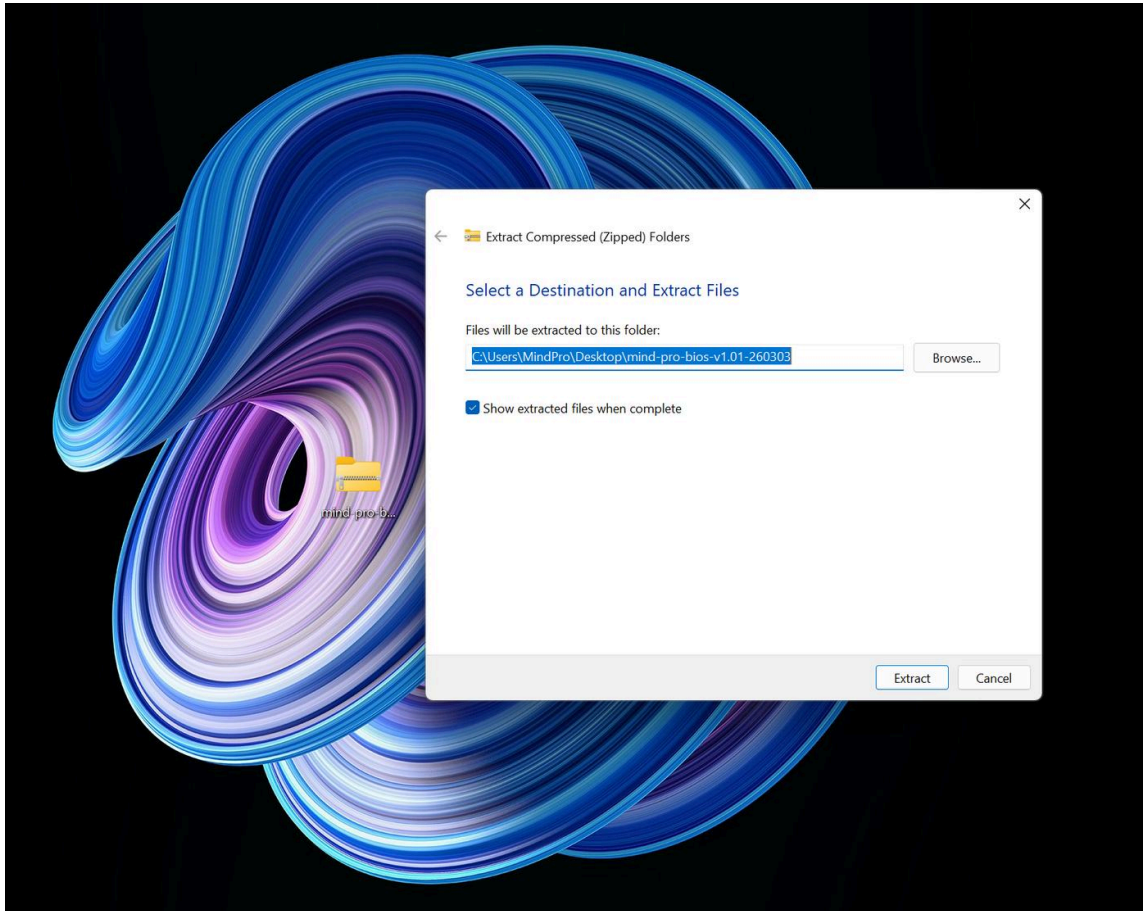


Step 2: Run the mindfw Installer

Open the BIOS folder. In this example, the folder name is `mind-pro-bios-v1.01-260122`, but please use the actual folder name of the version you downloaded. Locate the `mindfw` file, right-click it, and select `Install`.

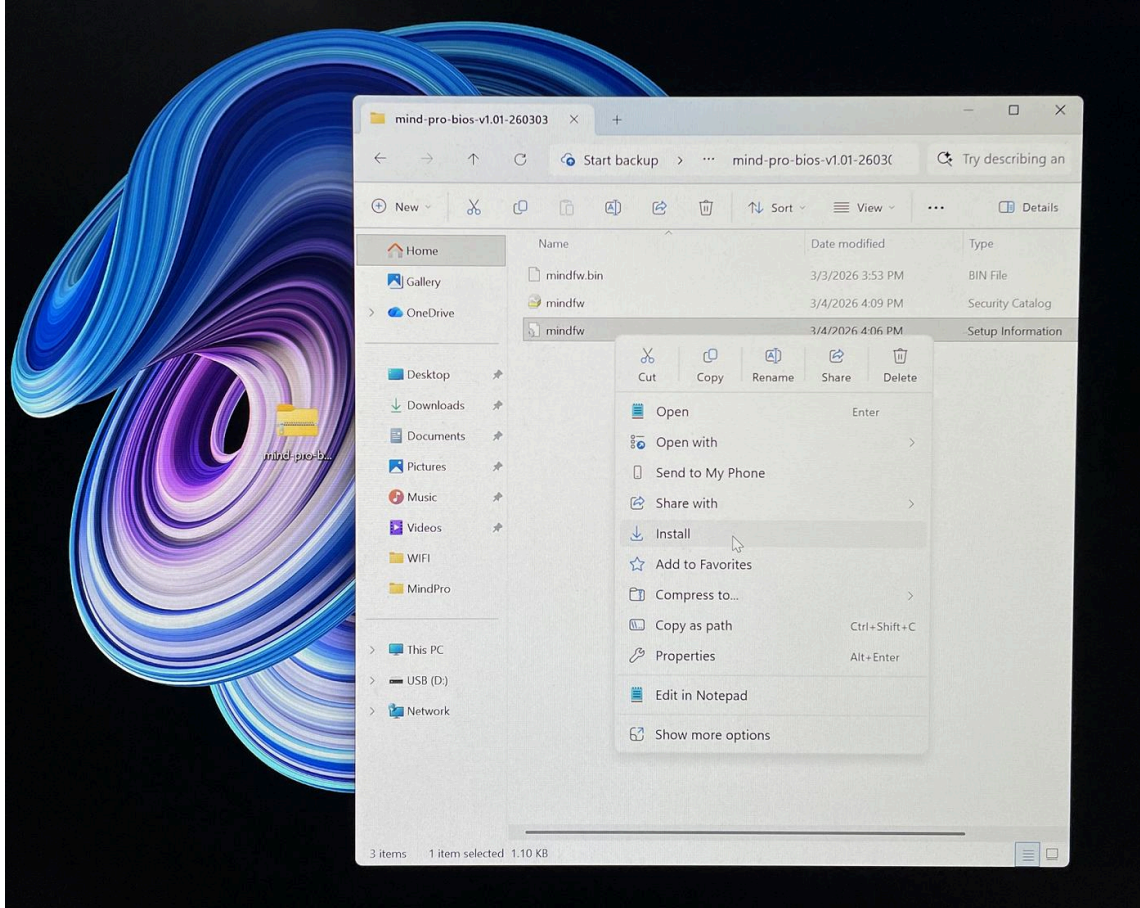

Step 3: Restart the Computer When Prompted

After the `mindfw` installation is complete, the system will display a restart prompt. Select `Restart Now` to continue.

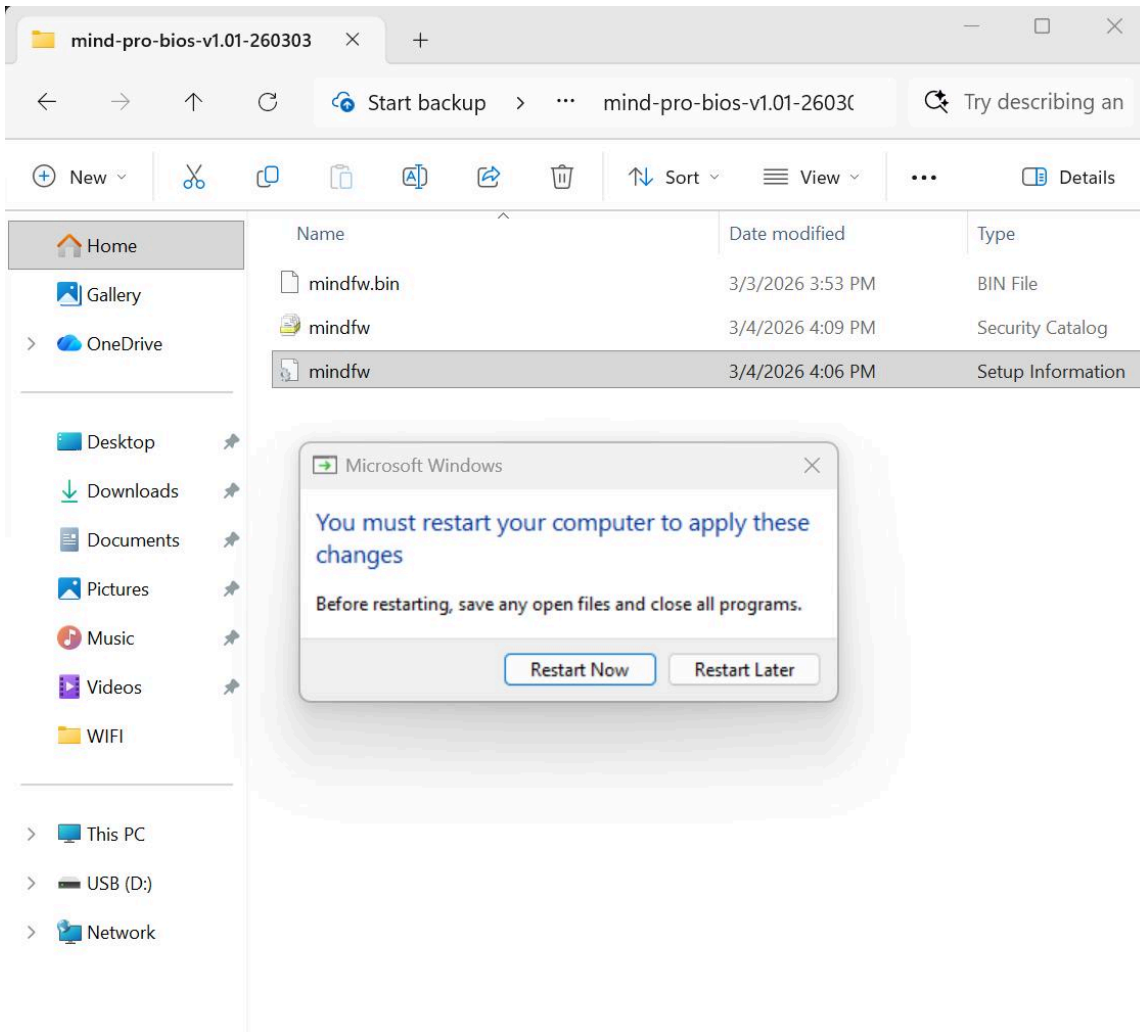


Step 4: Wait for the BIOS Update to Finish Automatically

After the computer restarts, the BIOS update will begin automatically. Once the update is complete and the system boots back into the OS, the BIOS update is finished.

Warning

Do not power off, unplug the device, or force a restart while the BIOS is being updated.

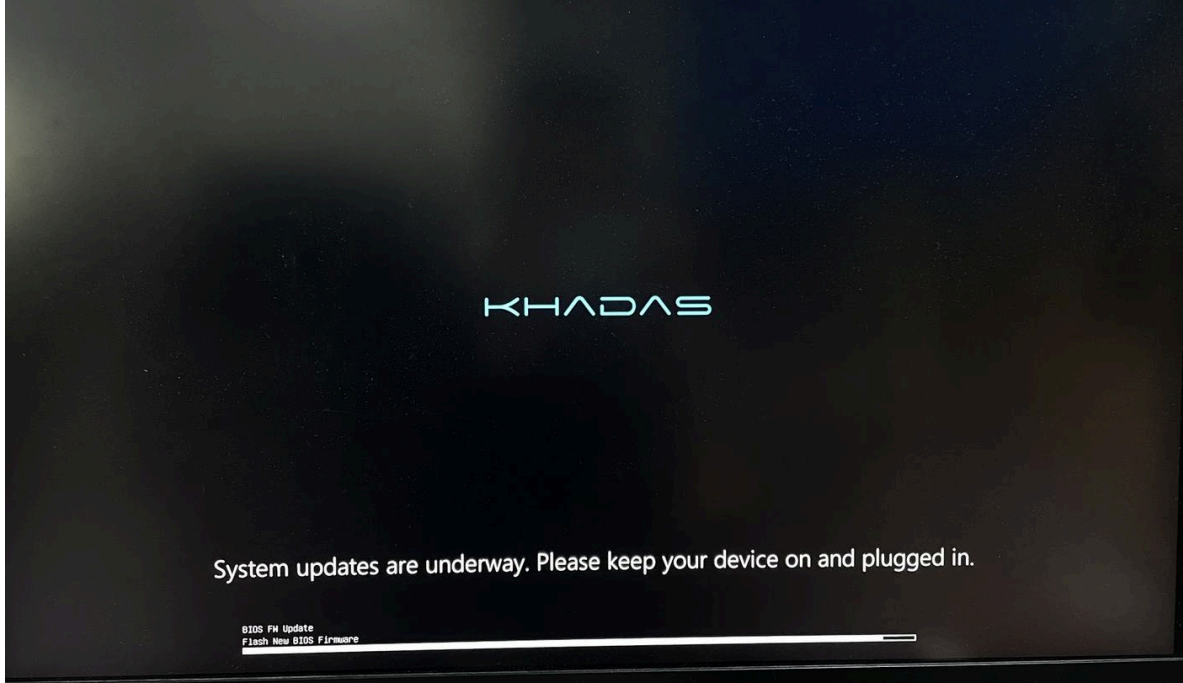

KHADAS

System updates are underway. Please keep your device on and plugged in.

BIOS FW Update
Finish Now BIOS Firmware